RETURN TO SERVICE PROCEDURE TABLE OF CONTENTS
RETURN TO CD-ROM TABLE OF CONTENTS

Dräger medical
A Dräger and Siemens Company

Field Service Procedure

Cylinder Mounting Kit
Anesthesia

Revision A
11/18/03
SP00287

RETURN TO SERVICE PROCEDURE TABLE OF CONTENTS
RETURN TO CD-ROM TABLE OF CONTENTS

CYLINDER MOUNTING KIT FOR TROLLEY

Purpose: The purpose of this document is to provide instruction for the installation of the Cylinder Mounting Kit. The kit allows two emergency cylinders to be mounted to the rear of the anesthesia machine trolley.

Fig. 1 Cylinder Mounting Kit

SP287.fm 19.11.03
All rights reserved. Copyright reserved.

Cylinder Mounting Assembly — Service Procedure

1 INSTALLATION PROCEDURE:

1. Remove the lower two drawers from the trolley by ending the drawers out to their outward position. Depress and hold the plastic latches on the sides of the drawer slides and pull the drawer forward, out of the slides as shown in Fig. 2.

NOTE:

Depress right hand side plastic latch upward and the left hand side plastic latch downward.

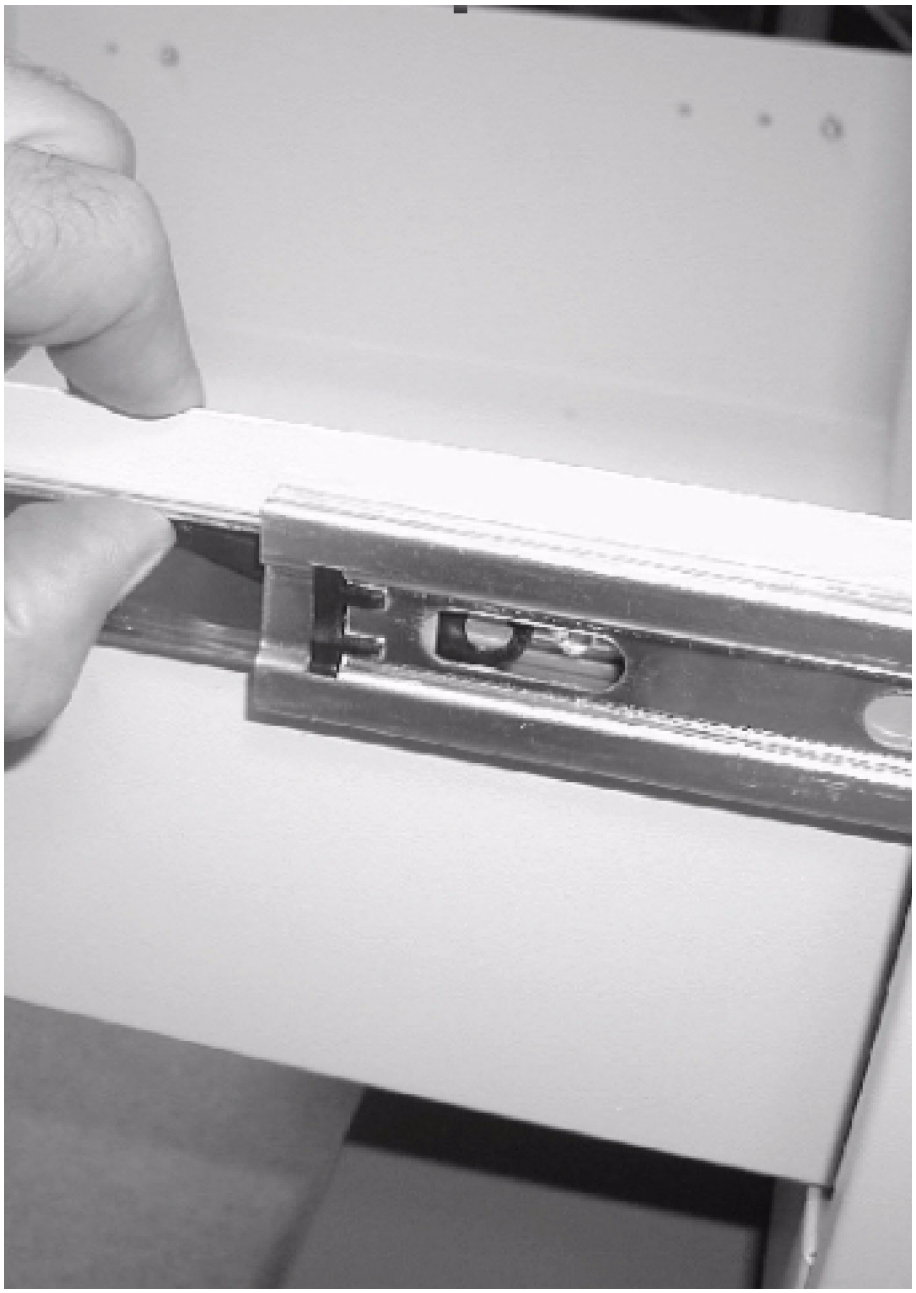

Fig. 2 Removal of Drawers from Cabinet

All rights reserved. Copyright reserved.

2. Remove and discard any existing hardware from the rear of the trolley center panel. Align the right tank bracket with the right set of holes on the rear of the cabinet. Insert the M5 x 12 screws through the holes from the rear. Install the M5 Kep Nuts on the screws inside the cabinet and tighten. Repeat this with the left hand bracket.

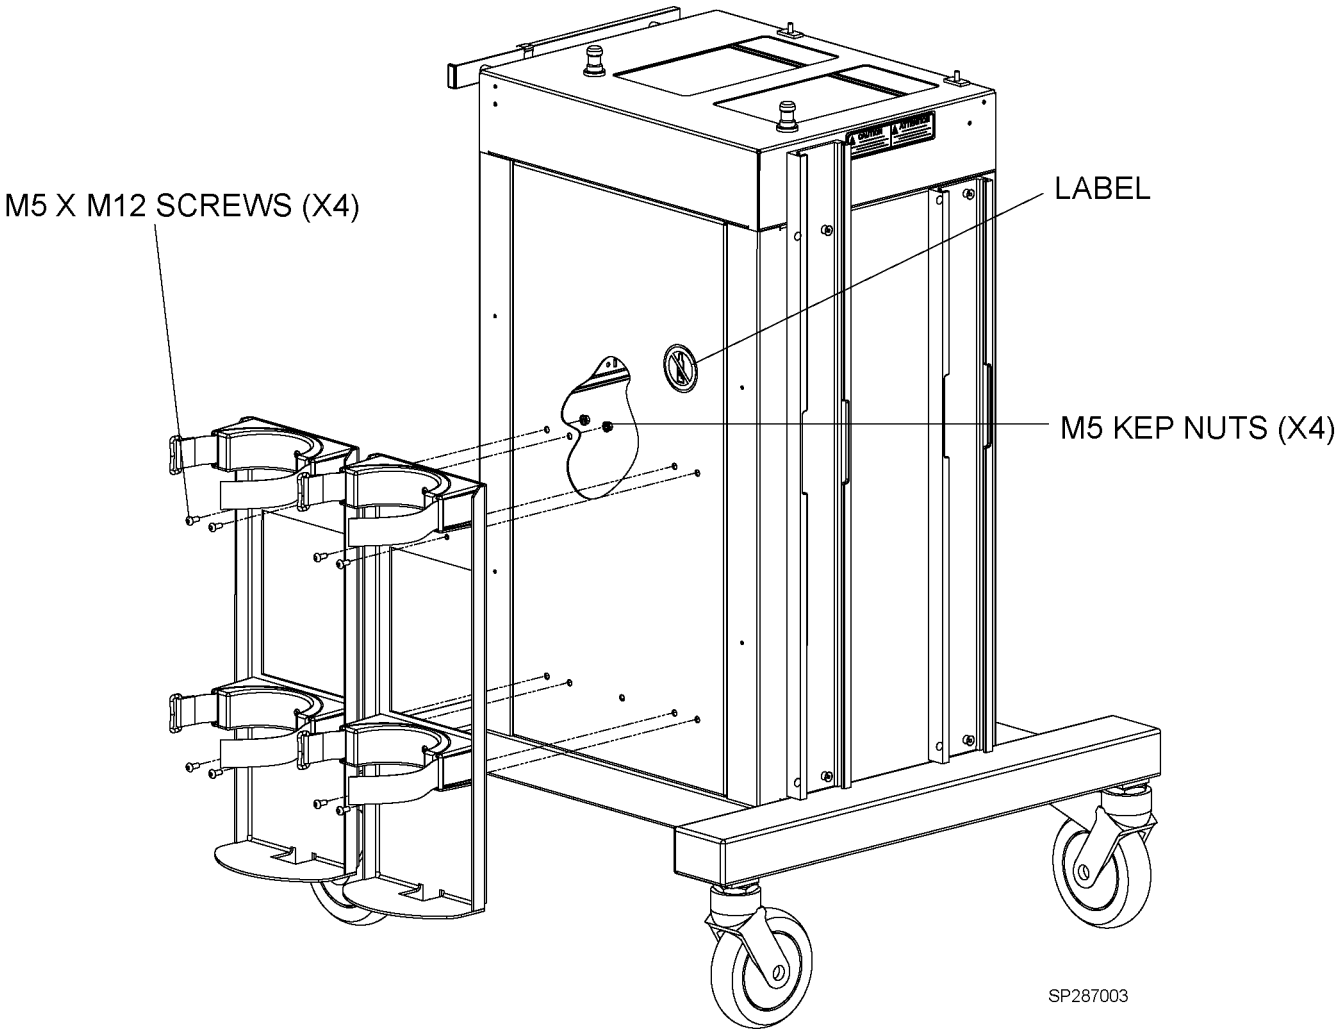

Fig. 3 Tank Bracket Installation

SP287.fm 19.11.03
All rights reserved. Copyright reserved.

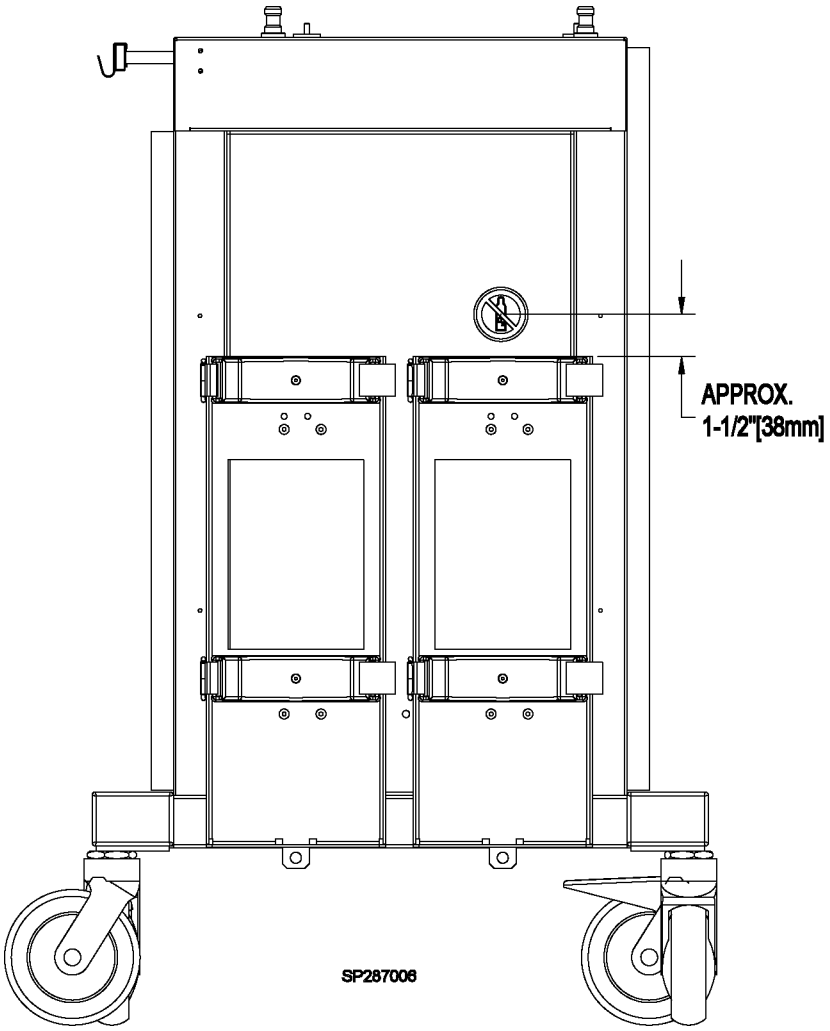

Fig. 4 Label Installation

3. Affix label to rear surface in the approximate location shown in Fig. 4.

All rights reserved. Copyright reserved.

Fig. 5 Label

WARNING:
O2 cylinders are not to be installed in the right position when facing the rear of the machine.

SP287.fm 19.11.03
All rights reserved. Copyright reserved.

4. Reinstall the two drawers by aligning the slide rails with the slides that are attached to the inside of the cabinet. Carefully push the drawer into the cabinet, noting that the slides are interlocking properly, as shown in Fig. 6. Push the drawer to the fully closed position. Then pull the drawer to the outer position. The drawer should stop in the outer position if the slides are properly engaged.

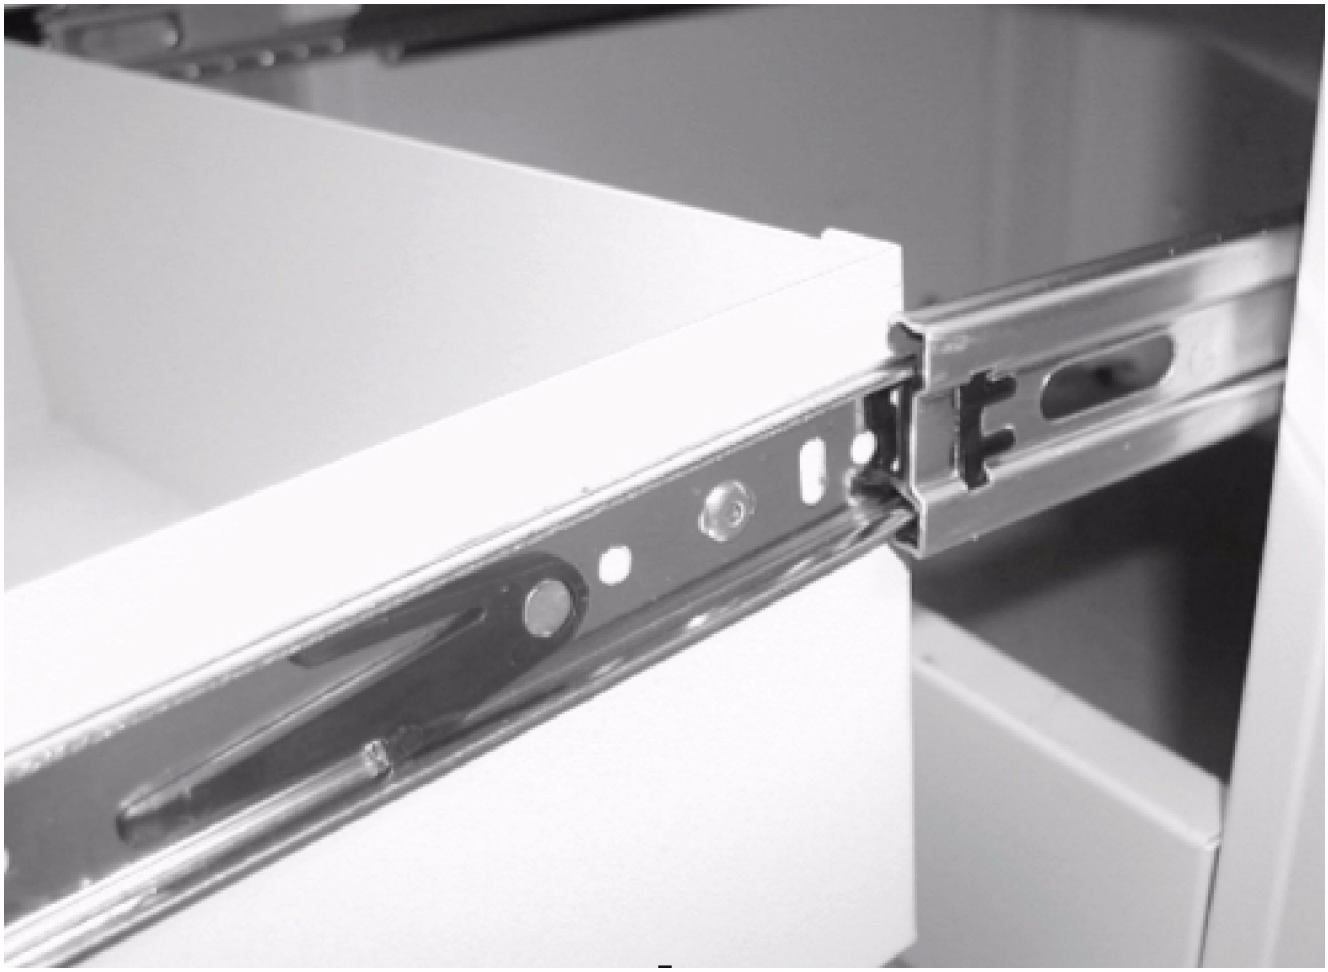

Fig. 6 Installing Drawers into Cabinet

All rights reserved. Copyright reserved.

5. To use either of the brackets with larger diameter cylinders, the cylinder spacer inserts may be removed from the bracket by removing the hardware securing the insert to the bracket.

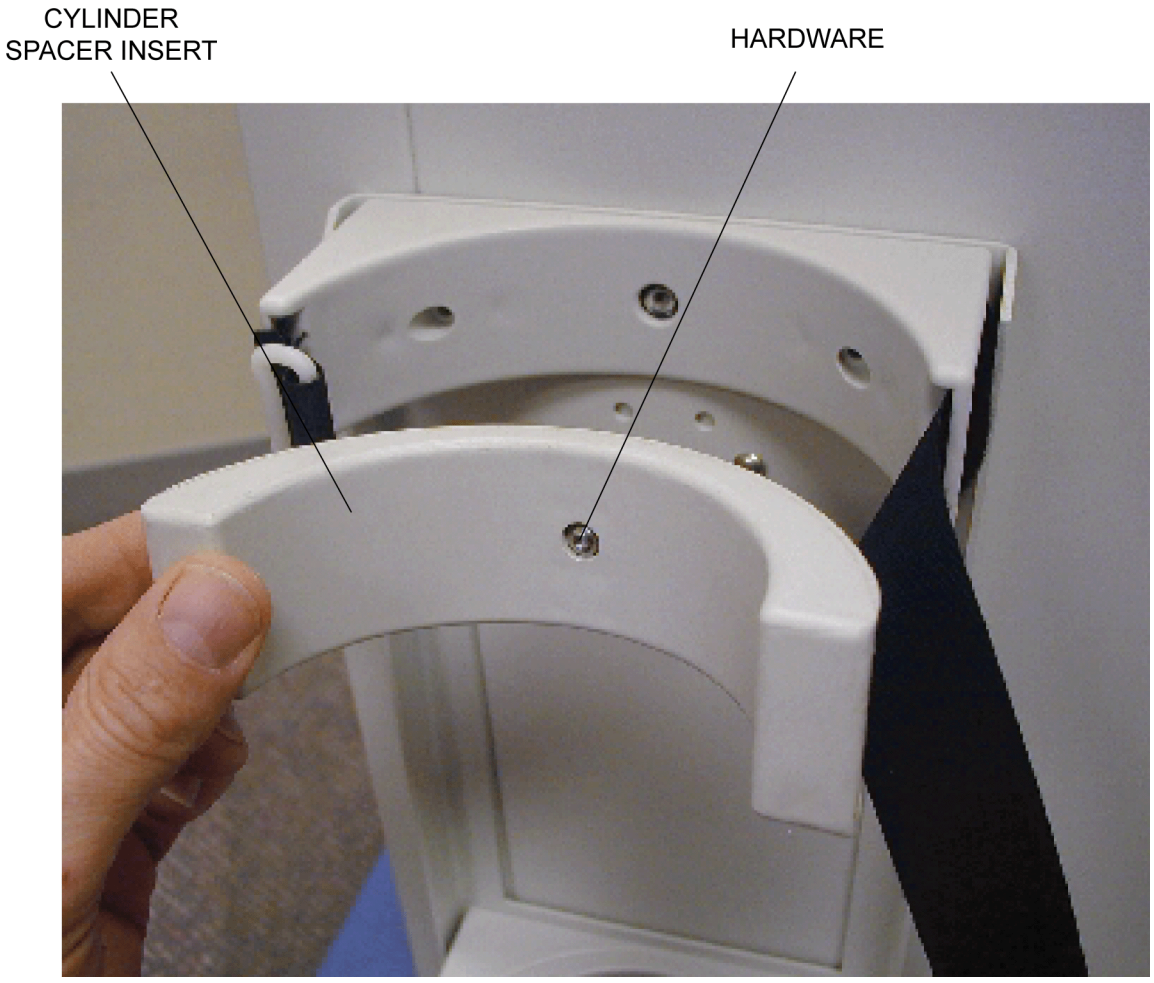

Fig. 7 Cylinder Spacers

SP287.fm 19.11.03
All rights reserved. Copyright reserved.

RETURN TO SERVICE PROCEDURE TABLE OF CONTENTS
RETURN TO CD-ROM TABLE OF CONTENTS

RETURN TO SERVICE PROCEDURE TABLE OF CONTENTS
RETURN TO CD-ROM TABLE OF CONTENTS

In the United States:
Draeger Medical, Inc.
3136 Quarry Road
Telford, PA 18969
USA

Tel: (215) 721-5402
(800) 543-5047
Fax: (215) 721-5785

In all other countries:
Dräger Medical AG & Co. KGaA
Moislinger Allee 53 – 55
D-23542 Lübeck
Germany

Tel: (++49) (0) 1805-3723437
Fax: (++49) 451/882 - 3779

Cylinder Mounting Kit en
SP00287

Subject to change without notice.
Will not be replaced in the event of modifications.